

ROSONI



10
Ø 6 cm



12
Ø 7 cm



13
Ø 7 cm



14
Ø 9 cm



15
Ø 9 cm



17
Ø 10,5 cm



1064
Ø 13 cm



16
Ø 15,5 cm



1063
Ø 15 cm



1057
Ø 19 cm



1061
Ø 17 cm



1059
Ø 16 cm



1062
Ø 14 cm



1060
Ø 16 cm



1056
Ø 21 cm



1055
Ø 21 cm



1020
Ø 20,5 cm



1058
20*20 cm



1054
Ø 24.5 cm



1021
Ø 30 cm



1033
Ø 28,5 cm



1000
Ø 39 cm



1016
Ø 32 cm



1032
Ø 31 cm



1028
Ø 32,5 cm



1002
44*31 cm



1031
Ø 33 cm



1027
Ø 32,5 cm



1029
Ø 32,5 cm



1030
Ø 37 cm



1041
Ø 42,5 cm



1019
50*33 cm



1001
Ø 50 cm



1007
Ø 43 cm



1015
Ø 41 cm



1043
Ø 43 cm



1025
Ø 52 cm



1069
51,5*39 cm



1003
50,5*41 cm



1046
Ø 47,5 cm



1022
Ø 30 cm



1039
Ø 30 cm



1070
57*42 cm